



A001
B001
B002
B098
B099
B107
B108
B109
C002
C003
H001
J121
J132
J149
M001

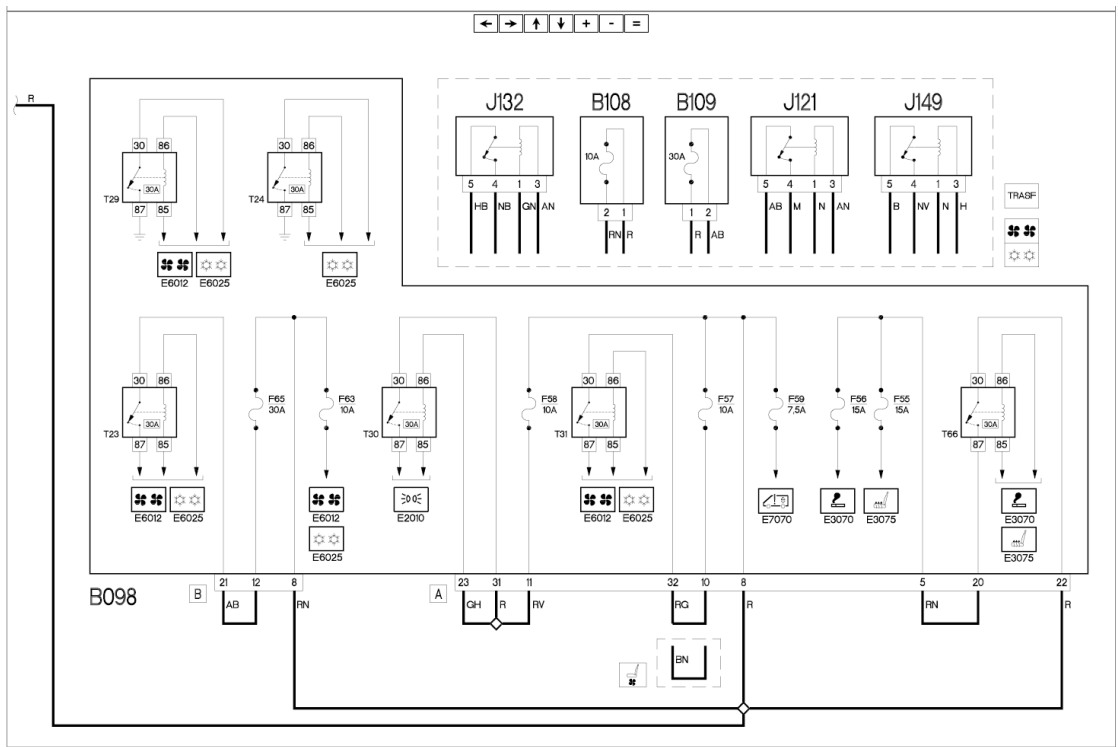


A001
B001
B002
B098
B099
B107
B108
B109
C002
C003
H001
J121
J132
J149
M001

Print (set landscape in printer property)

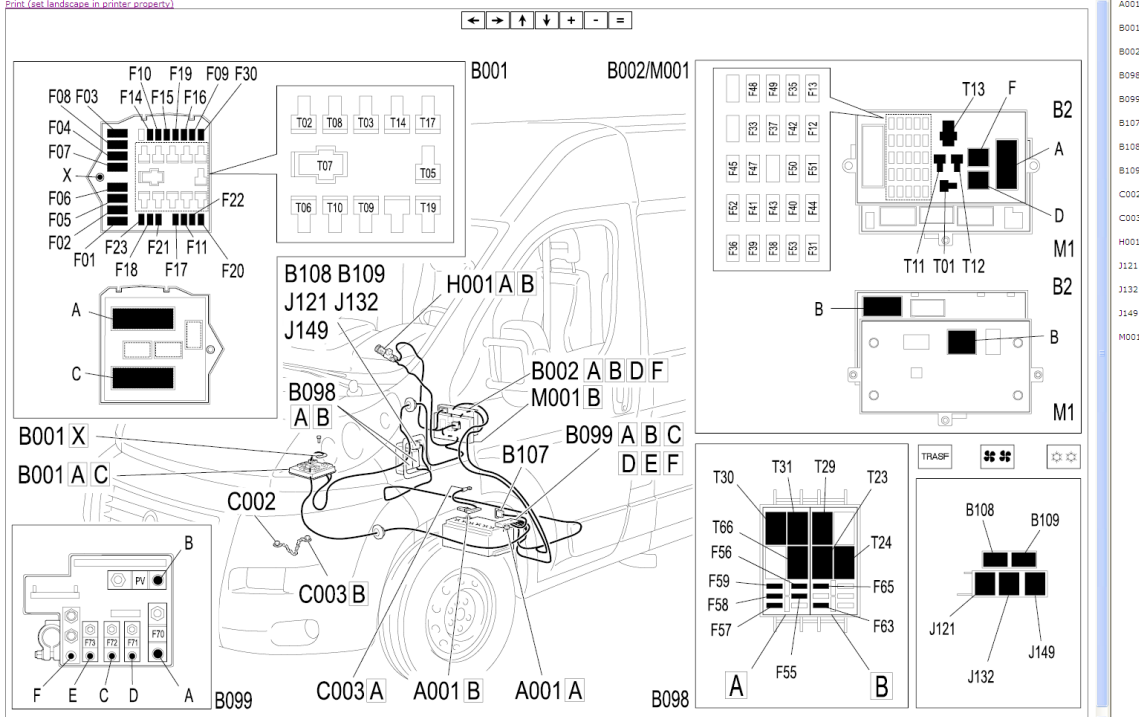


Component code	Description	With reference to the assembly
A001	BATTERY	Op. 5530B BATTERY AND LEADS
B001	JUNCTION UNIT	Op. 5505A MULTI-FUNCTION COMPONENTS
B002	JUNCTION UNIT UNDER DASHBOARD	Op. 5505A MULTI-FUNCTION COMPONENTS
B098	SUPPLEMENTARY FUSE BOX	-
B099	MAXI FUSE BOX ON BATTERY	Op. 5530B BATTERY AND LEADS
B107	MAXI FUSE FOR CONTROLLED SUSPENSION	-
B108	ADDITIONAL FAN FUSE	-
B109	ADDITIONAL HEATER/AIR CONDITIONER CONTROL PANEL FUSE	-
C002	BATTERY EARTH ON ENGINE	-
C003	BATTERY EARTH ON BODYSHELL	-
H001	IGNITION SWITCH	Op. 5520A IGNITION SWITCH
J121	PASSENGER COMPARTMENT AIR ADDITIONAL FAN RELAY	-
J132	ADDITIONAL AIR CONDITIONING FAN LOW SPEED ENGAGEMENT RELAY	-
J149	ADDITIONAL AIR CONDITIONING ENABLEMENT RELAY	-
M001	BODY COMPUTER	Op. 5505A MULTI-FUNCTION COMPONENTS

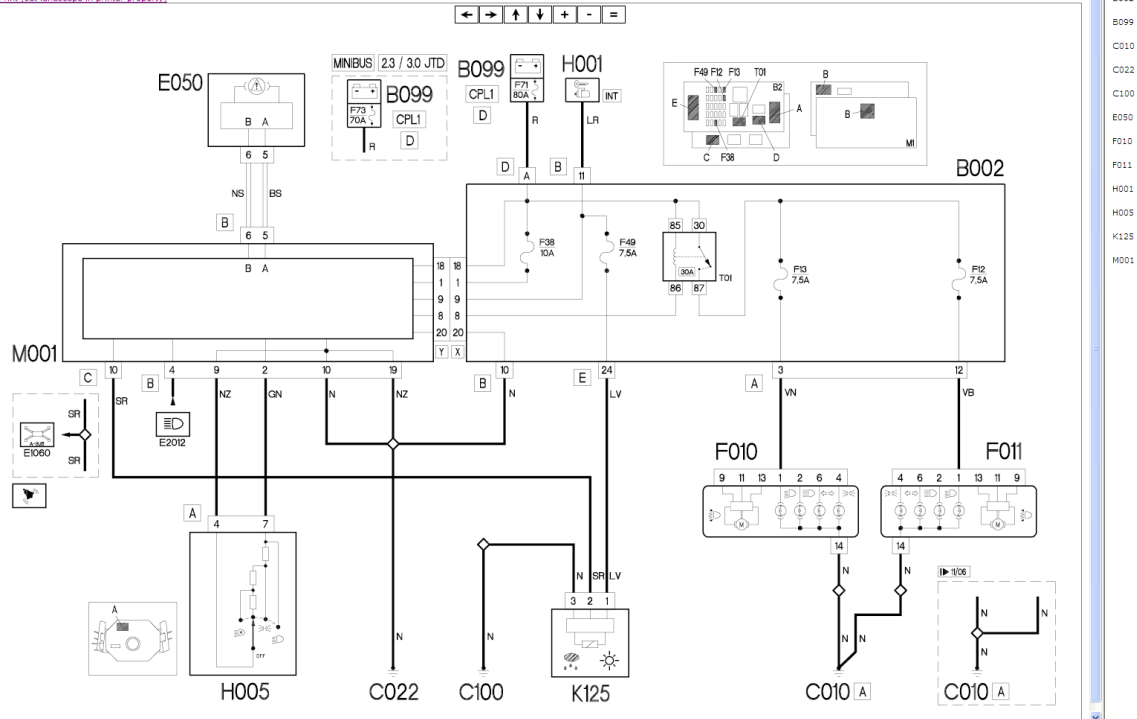

Component code	Description	With reference to the assembly
B002	JUNCTION UNIT UNDER DASHBOARD	Op. 5505A MULTI-FUNCTION COMPONENTS
B099	MAXI FUSE BOX ON BATTERY	Op. 5530B BATTERY AND LEADS
C010	LEFT FRONT EARTH	-
C022	Centre dashboard earth	-
C100	CAB EARTH	-
E050	INSTRUMENT PANEL	Op. 5560B ANALOGUE CONTROL PANEL
F010	LEFT HEADLAMP	Op. 5540B HEADLAMPS
F011	RIGHT HEADLAMP	Op. 5540B HEADLAMPS
H001	IGNITION SWITCH	Op. 5520A IGNITION SWITCH
H005	STEERING COLUMN SWITCH UNIT	Op. 5550A STALK UNIT
K125	RAIN AND DUSK SENSOR	Op. 5050B WINDSCREEN WASH/WIPE
M001	BODY COMPUTER	Op. 5505A MULTI-FUNCTION COMPONENTS

Print (set landscape in printer property)

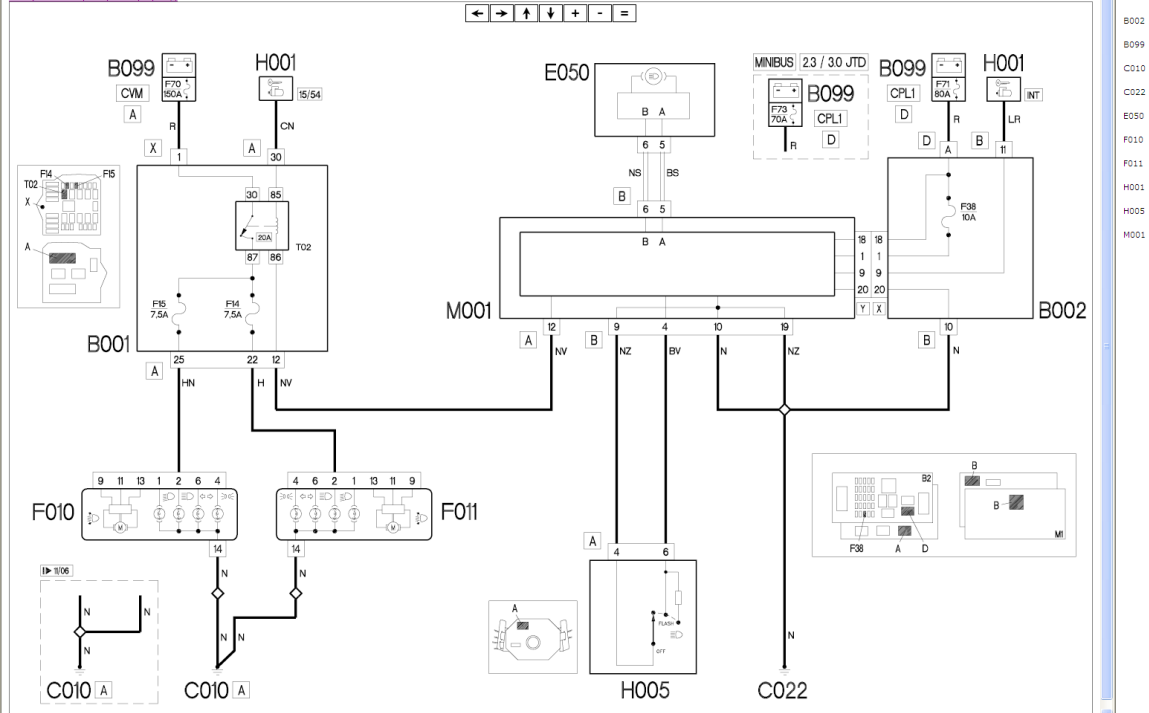

Component code	Description	With reference to the assembly
B001	JUNCTION UNIT	Op. 3505A MULTI-FUNCTION COMPONENTS
B002	JUNCTION UNIT UNDER DASHBOARD	Op. 3505A MULTI-FUNCTION COMPONENTS
B099	MAXI FUSE BOX ON BATTERY	Op. 3530B BATTERY AND LEADS
C010	LEFT FRONT EARTH	-
C022	Centre dashboard earth	-
E050	INSTRUMENT PANEL	Op. 3560B ANALOGUE CONTROL PANEL
F010	LEFT HEADLAMP	Op. 3540B HEADLAMPS
F011	RIGHT HEADLAMP	Op. 3540B HEADLAMPS
H001	IGNITION SWITCH	Op. 3520A IGNITION SWITCH
H005	STEERING COLUMN SWITCH UNIT	Op. 3550A STALK UNIT
M001	BODY COMPUTER	Op. 3505A MULTI-FUNCTION COMPONENTS