




Engine Fuse and Relay Box – B001

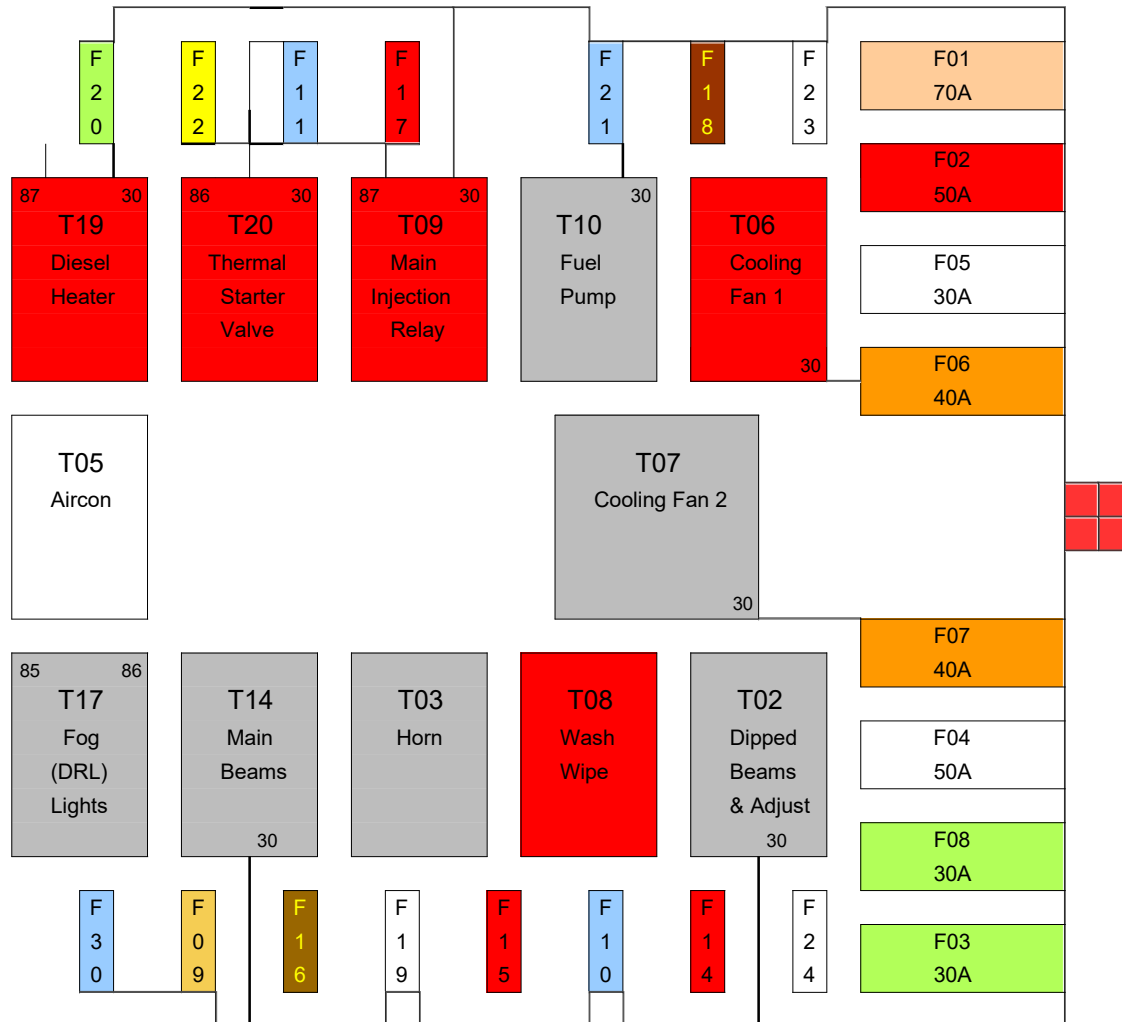

Items coloured not fitted.

- F01 Supply to CFB (B002)
- F02 Thermal Starter Glowplug
- F03 Ignition Switch
- F04 ABS
- F05 Air Con
- F06 & T06 Cooling Fan 1
- F07 & T07 Cooling Fan 2
- F08 & T08 Wash Wipe
- F09 Fog Lights – (Used for DRLs was 15A)
- F10 Horn
- F11 E.I. secondary services ----->
- F14 RHS Dipped Beam
- F15 LHS Dipped Beam + Alignment
- F16 Ignition
- F17 E.I. primary services
- F18 Key Code + Main Injection Relay
- F19 Aircon
- F20 Diesel Heater
- F21 Fuel Pump
- F22 E.I. Primary services
- F23 Automatic Gearbox
- F24 Auto Trans
- F30 Main Beams

 Instrument Panel
Oil Vapour Heater
(Debimeter)
(EGR Solenoid)
Injn Pump 3rd Piston
Relay T20 coil (L085)
L085 Therml Start Vlve
J131 Thermal Start Rly
Relay T19 fuel heater
Water in fuel sensor.

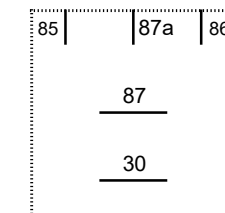

AB 27/07/23