



## DUCATO 2.0 16V TRANSMISSION HAND CONTROL ASSEMBLY - ADJUSTMENT/INSPECTION AND EV. LUBRICATION OF FIXINGS 2125C10

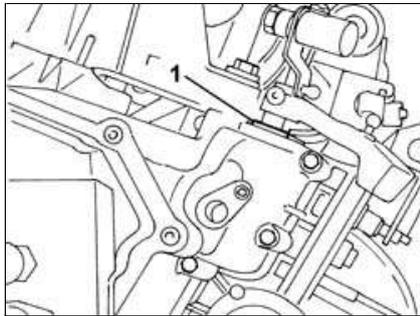

- Position the vehicle on the lift.
- Place the gearbox in neutral.

### **Op. 7055B54 UNDER-ENGINE GUARD - R R**


1. Place a 10 mm shim under the reverse gear engagement lever.

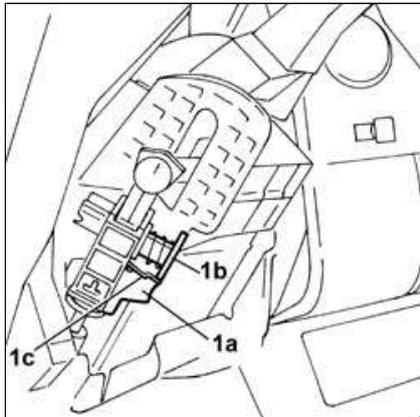


- Lower the vehicle.

### **Op. 7040A28 TRIM ON GEARBOX CONTROL PANEL - R.R.**

1. Lower the lever (1a) and push the button (1b) forwards as far as the splining (1c).

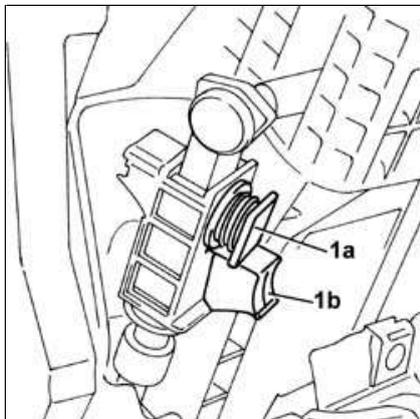


1. Release the lever (1a) so as to lock the button (1b).

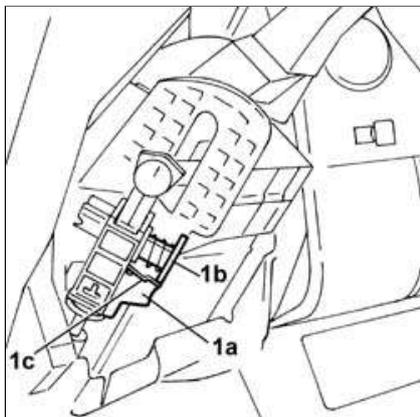


- Engage fifth speed.

1. Lower the lever (1a) and release the button (1b) from the splining (1c).


- Disengage fifth speed and engage first speed.

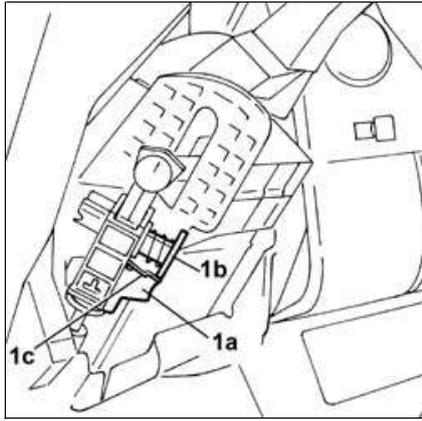


1. Lower the lever (1a) and push the button (1b) forwards as far as the splining (1c).

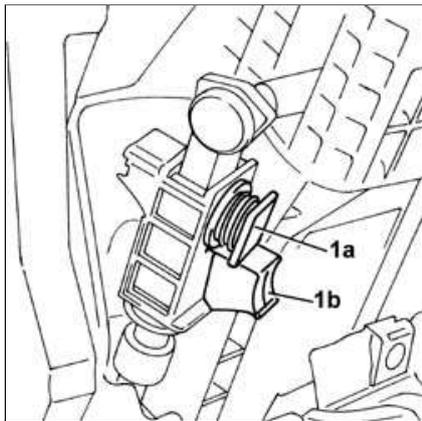

- Release the lever (1a) so as to lock the button (1b).

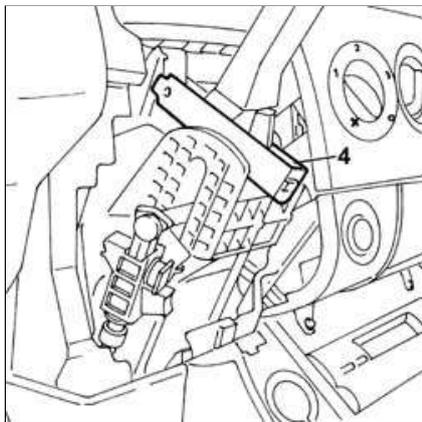

1. Position a 1.2 mm shim between the gear lever and the barrier.

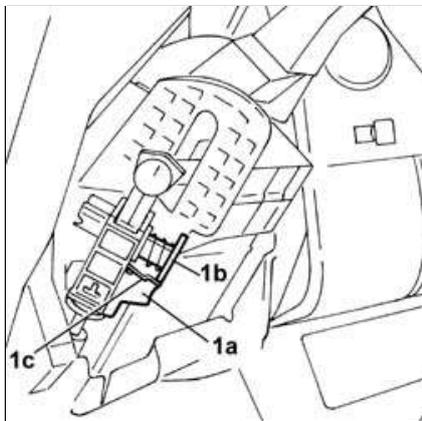

- Send the gear lever into the end of travel position against the shim.

1. Lower the lever (1a) and release the button (1b) from the splining (1c).

- Raise the vehicle.

- Remove the shim positioned previously under the reverse gear release lever.

**Op. 7055B54 UNDER-ENGINE GUARD - R R**

- Lower the vehicle.
- Remove the shim positioned previously from the gear lever.

**Op. 7040A28 TRIM ON GEARBOX CONTROL PANEL - R.R.**

- Remove the vehicle from the lift.