


Engine Fuse and Relay Box CVM (B001)

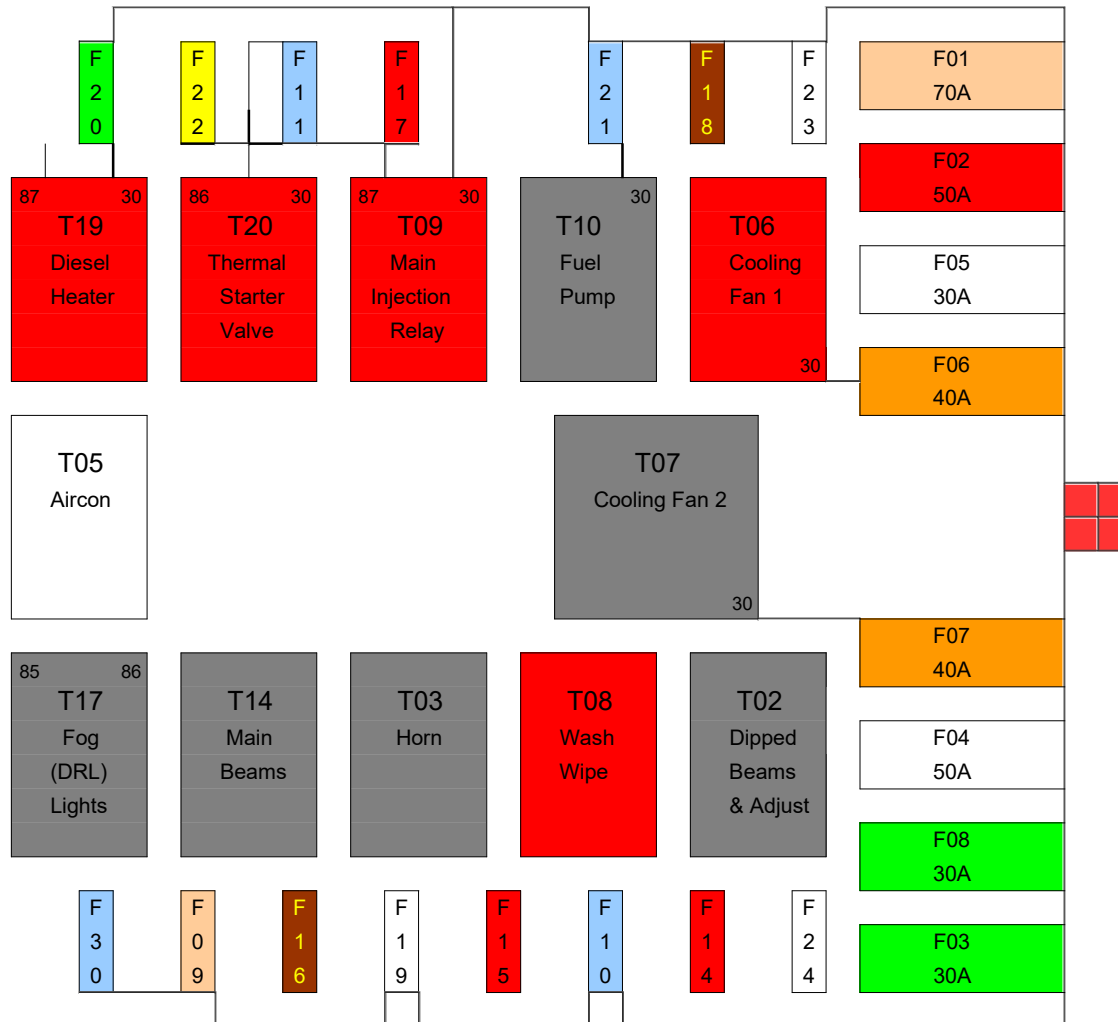

Caution designations not verified.

Items coloured not fitted.

- | | |
|---|--|
| <p>F01 Supply to CFB (B002)</p> <p>F02 Thermal Starter Glowplug</p> <p>F03 Ignition Switch</p> <p>F04 ABS</p> <p>F05 Air Con</p> <p>F06 & T06 Cooling Fan 1</p> <p>F07 & T07 Cooling Fan 2</p> <p>F08 & T08 Wash Wipe</p> <p>F09 Fog Lights – (Used for DRLs was 15A)</p> <p>F10 Horn</p> <p>F11 E.I. secondary services -----></p> <p>F14 RHS Dipped Beam</p> <p>F15 LHS Dipped Beam + Alignment</p> <p>F16 Ignition</p> <p>F17 E.I. primary services</p> <p>F18 Fiat Code / ECU - Marked IGN</p> <p>F19 Aircon</p> <p>F20 Diesel Heater</p> <p>F21 Fuel Pump</p> <p>F22 E.I. Primary services</p> <p>F23 Automatic Gearbox</p> <p>F24 Auto Trans</p> <p>F30 Main Beams</p> | <p>Instrument Panel</p> <p>Oil Vapour Heater</p> <p>Air Flow Sensor (EGR Solenoid)</p> <p>InjnPump 3rd Piston</p> <p>Relay T19 coil</p> <p>Relay T20 coil (L085)</p> <p>L085 Therml Strt Valve</p> <p>J131 Thermal Strt Rly</p> |
|---|--|

