

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#)[Privacy policy](#)

Fiat Ducato (2015-2019..) fuses



*Fuse box diagram (location and assignment of electrical fuses) for **Fiat Ducato** (2015, 2016, 2018, 2019-...)*

See other Fiat Ducato:



[Fiat Ducato \(2007-2014\) fuses...>>](#)

Fuse box diagram: Fiat Ducato (2015-2019..)

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.


[Ok](#)[Privacy policy](#)

Fuse box location



Fuses are grouped into three fuse boxes to be found respectively on the dashboard, on the passenger compartment right pillar and in the engine compartment.

Engine compartment fuse box

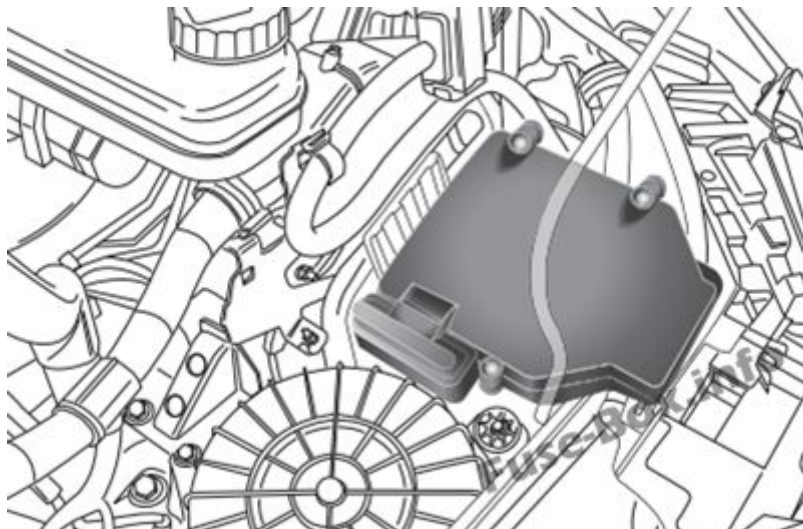


Dashboard fuse box

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#)[Privacy policy](#)

To gain access to the fuses in the fuse box on the dashboard, loosen the fastening screws A and remove the cover.

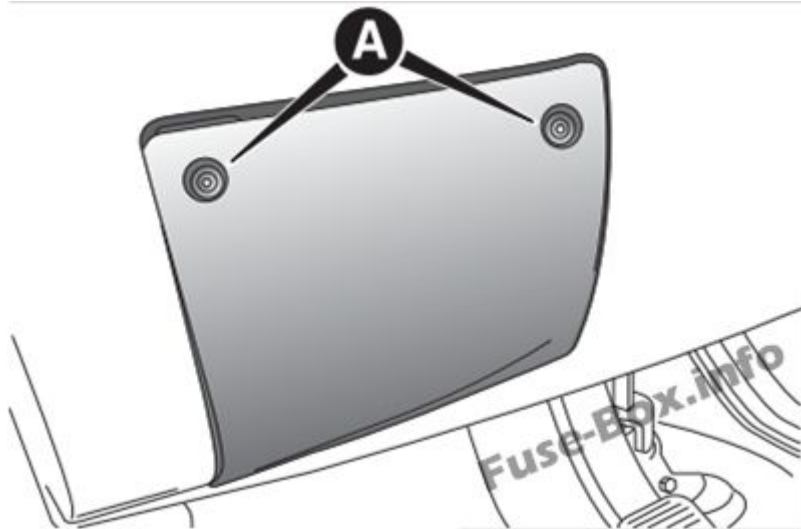


Optional fuse box on the right central post (where provided)

To gain access to the fuse box, remove the protection cover.


We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

Ok

Privacy policy

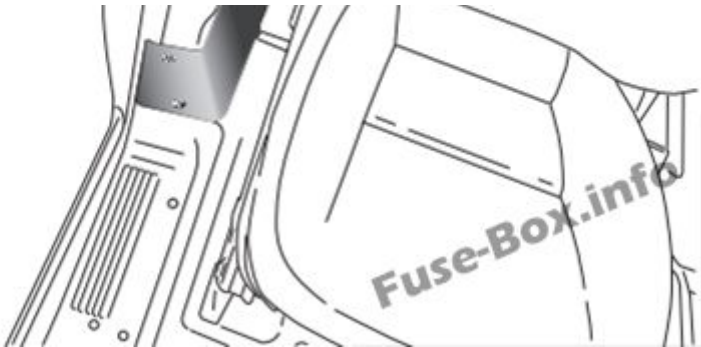

Fuse box diagram (Engine compartment)

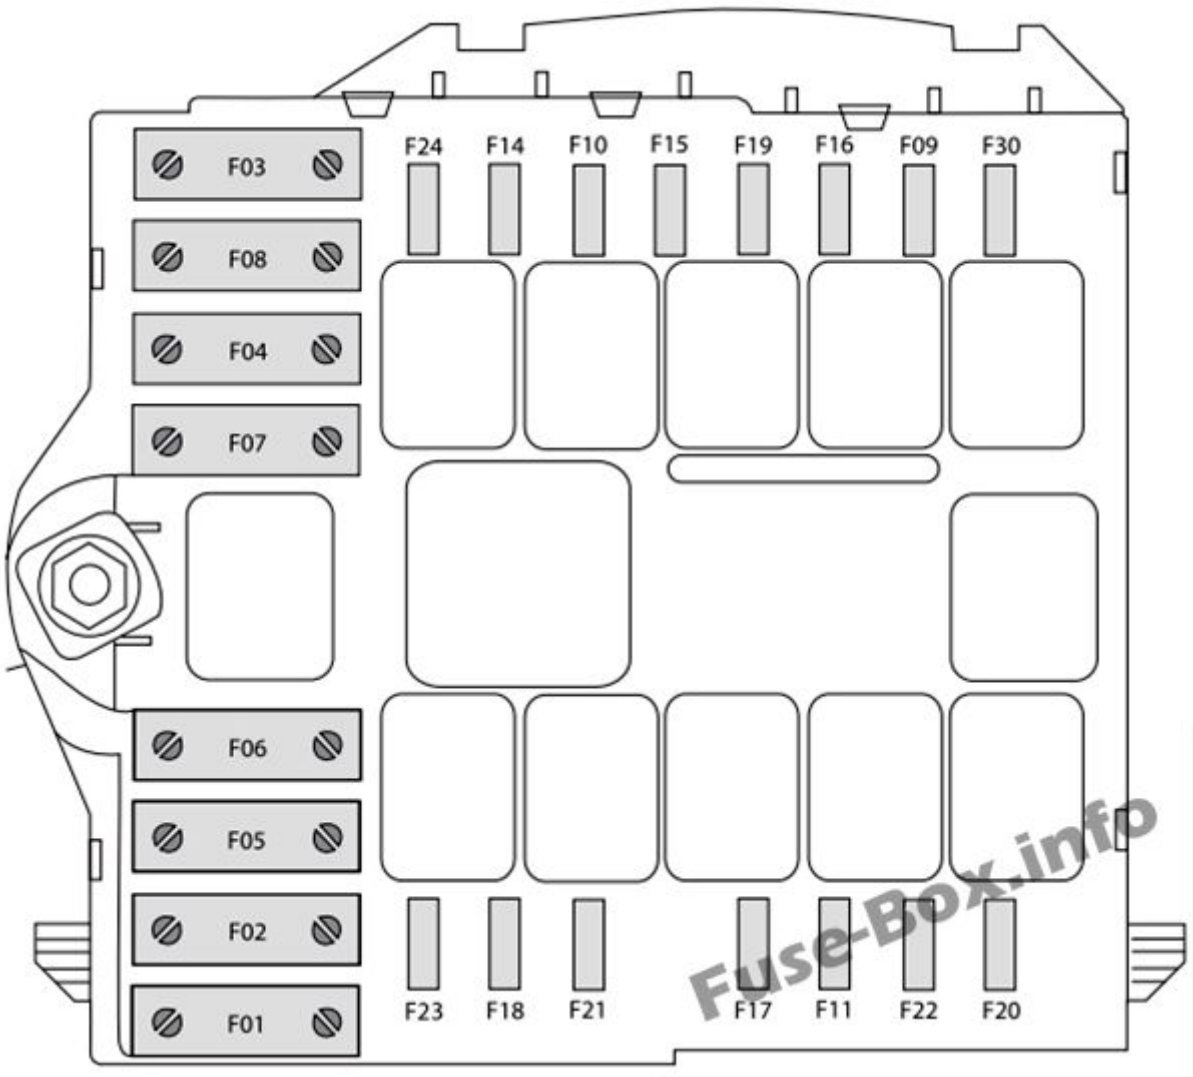

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#)
[Privacy policy](#)


F03	30	Ignition switch (+battery)
F04	40	Heated filter
F05	20/50	Vaporiser for Puma engine/Passenger compartment ventilation with Webasto, robotised gearbox pump (+battery)
F06	40/60	Engine cooling high speed fan (+battery)
F07	40/50/60	Engine cooling low speed fan (+battery)
F08	40	Passenger compartment fan (+key
F09	15	Rear power socket (+battery)
F10	15	Horn
F14	15	Power socket (+battery)
F15	15	Cigar lighter (+battery)
F18	7,5	Powertrain Control Module, robotised gearbox control unit (+battery)
F19	7,5	Air conditioning compressor
F20	30	Windscreen wiper
F24	7,5	Auxiliary control panel for mirror movement and folding (+key)
F30	15	Mirrors demisting

Fuse box diagram (Dashboard fuse box)

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

Ok

Privacy policy

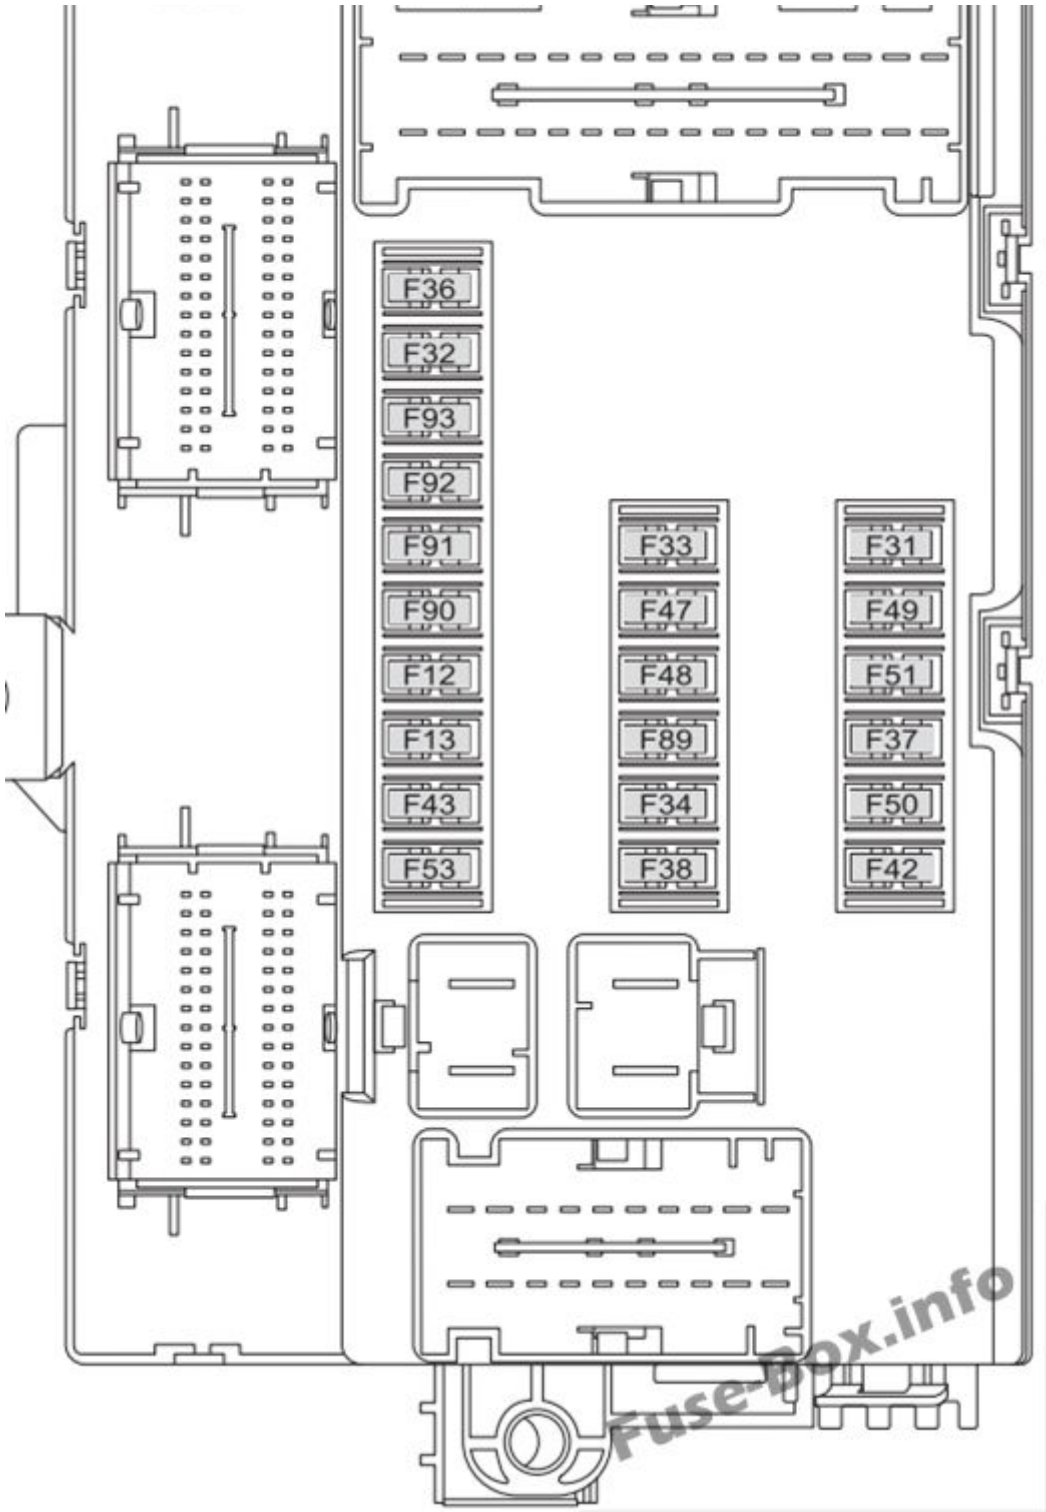

Assignment of the fuses in the Dashboard Fuse box

Fuse	Ampere rating [A]	Device protected


We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#)
[Privacy policy](#)

F12	7,5	Right dipped beam headlight
F13	7,5	Left dipped headlight
F31	5	Engine compartment control unit relay, dashboard control unit relay (+key)
F32	7,5	Lighting of roof lights in the passenger compartment (+battery)
F33	7,5	Battery monitoring sensor for Start&Stop versions (+battery)
F34	7,5	Minibus interior lights (emergency)
F35	7,5	Reversing lights, sevotronic control unit, Water in diesel fuel filter sensor, (+key)
F36	10	Radio, climate control, alarm, tachograph, battery disconnecting control unit, Webasto timer (+battery)
F37	7,5	Brake light control (main), third brake light instrument panel (+key)
F38	20	Door lock (+battery)
F43	20	Windscreen wiper (+key)
F47	20	Driver's side electric window
F48	20	Passenger side electric window
F49	5	Parking sensor control unit, radio, steering wheel controls, central control panel, left control panel, auxiliary panel, battery disconnecting control unit (+key)
F51	5	Climate control, power steering control unit, reverse lights, diesel filter water sensor, flow meter, tachograph (+key)
F53	7,5	Instrument panel (+battery)
F89	—	—

F90	7,5	Left main beam headlight
F91	7,5	Right main beam headlight
F92	7,5	Left fog light
F93	7,5	Right fog light

Fuse box diagram (Optional fuse box)

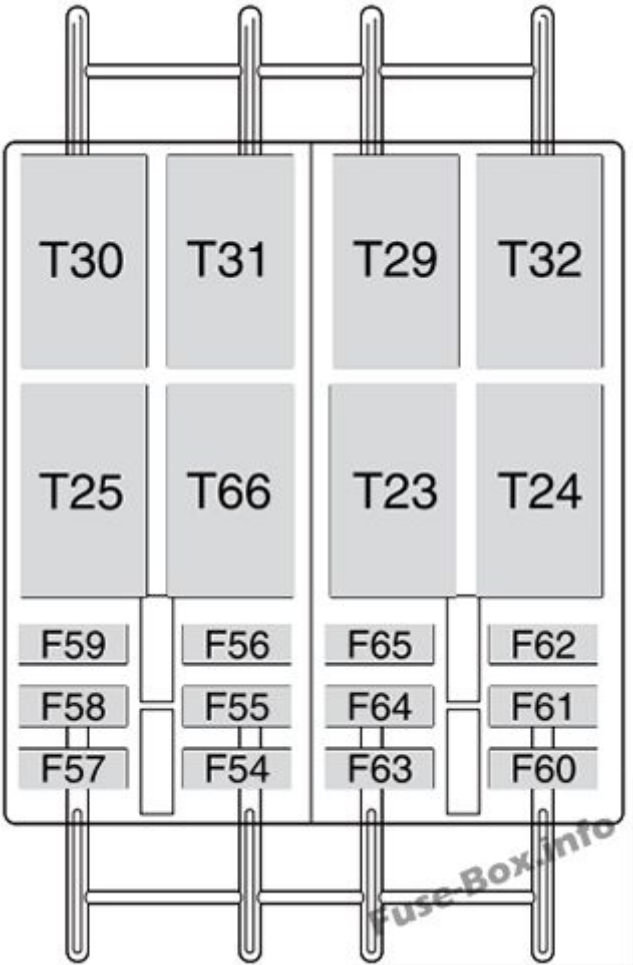

Assignment of the fuses in the Optional fuse box

F55	15	Heated seats
F56	15	Rear passenger power socket
F57	10	Additional heater under the seat
F58	10	Left heated rear window
F59	7,5	Right heated rear window
F60	—	—
F61	—	—
F62	—	—
F63	10	Additional passenger heater control
F64	—	—
F65	30	Additional passenger heater fan

Search

Q

- Acura
- Alfa Romeo
- Audi
- BMW
- Buick
- Cadillac

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#)[Privacy policy](#)[Dodge](#)[Fiat](#)[Ford](#)[GMC](#)[Honda](#)[Hyundai](#)[Isuzu](#)[Jeep](#)[KIA](#)[Land Rover](#)[Lexus](#)[Lincoln](#)[Mazda](#)[Mercedes-Benz](#)[Mercury](#)[Mitsubishi](#)[Nissan](#)[Opel / Vauxhall](#)[Peugeot](#)[Pontiac](#)[Porsche](#)[Renault](#)[Saab](#)[Saturn](#)[Scion](#)[SEAT](#)

We use cookies to ensure that we give you the best experience on our website. If you continue to use this site we will assume that you are happy with it.

[Ok](#)[Privacy policy](#)[Suzuki](#)[Toyota](#)[Volkswagen](#)[Volvo](#)[About](#) [Contact](#) [Use of Cookies](#)

All information is provided for informational purposes only. We are not responsible for any of your actions. For qualified repairs, contact authorized service centers.

All trademarks are the property of their respective owners.

Fuse Box Diagrams © 2019