



LHS Cab Fuse and Relay Panel - B002

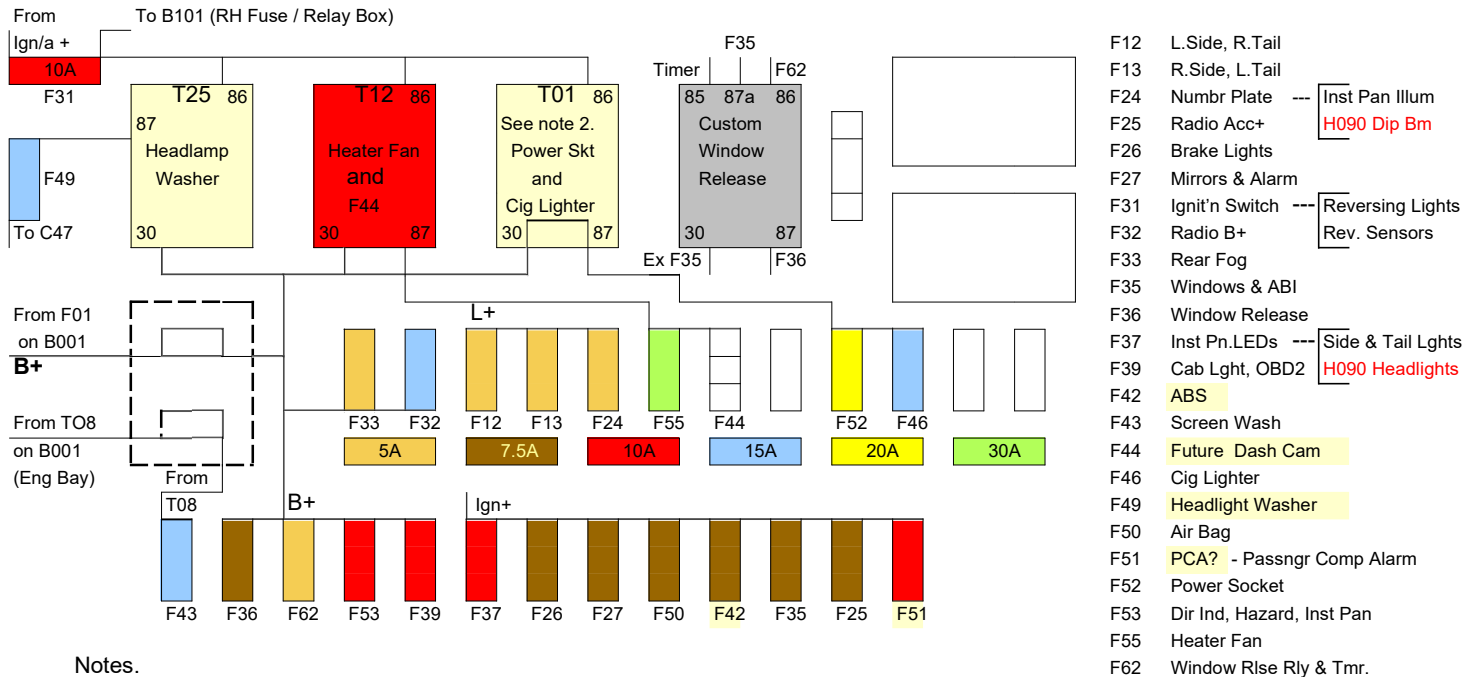

Notes.

1. Ign + (Int) maintained on eng. starting. Ign/a +, (Int/a) interrupted while starting engine.
2. Relay T01 removed and 30 to 87 bridged to give permanent supply to power sockets.
3. Cig Skt moved from F44 to F46, wire out F44 for future Dash Cam.
4. Window Release relay, fuses F36, F62 and connections added.
5. Items coloured light yellow not fitted.

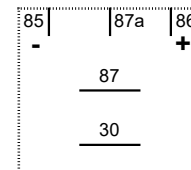

View looking into
relay socket