


Removing ([Refitting](#))

- Disconnect the negative battery terminal.


See in Op. 1048B14


Op. 1048B20 AIR DELIVERY SLEEVE FROM HEAT EXCHANGER TO RIGID PIPE - REPLACE

1. Undo the fixing bolts (1a) and place the power assisted steering fluid reservoir assembly and mounting bracket (1b) outside of the work area.

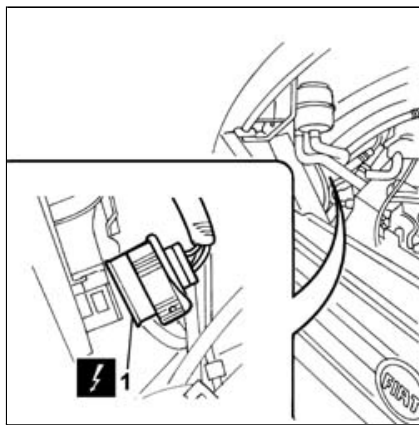

1. Disconnect the right front light cluster electrical connection.


	Description	Connector
1	Right headlamp	F011

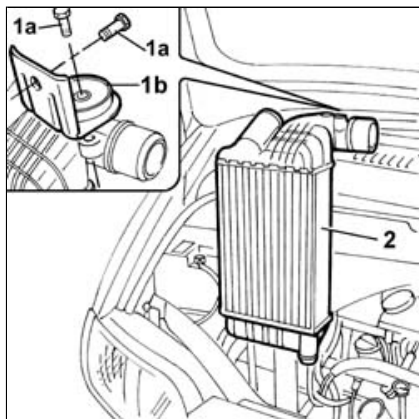

1. Undo the fixing bolts (1a) and remove the bracket (1b).
2. Remove the heat exchanger.

Refitting ([Removing](#))

- Fit the air/air heat exchanger in the housing.
- Fit the mounting bracket and tighten the fixing bolts.
- Connect the right front light cluster electrical connection.

	Description	Connector
.	Right headlamp	F011

- Position the power assisted steering fluid reservoir assembly and mounting bracket and

tighten the fixing bolts.

Op. 1048B20 AIR DELIVERY SLEEVE FROM HEAT EXCHANGER TO RIGID PIPE - REPLACE

See in Op. 1048B14

- Connect the negative battery terminal.